


ST160 Stainless Steel Foam Injector

Specification:

Min - 8lpm, 80 bar
 Max - 80lpm, 350 bar
 Inlet - 3/8" F
 Outlet - 3/8" M

System Set-up:

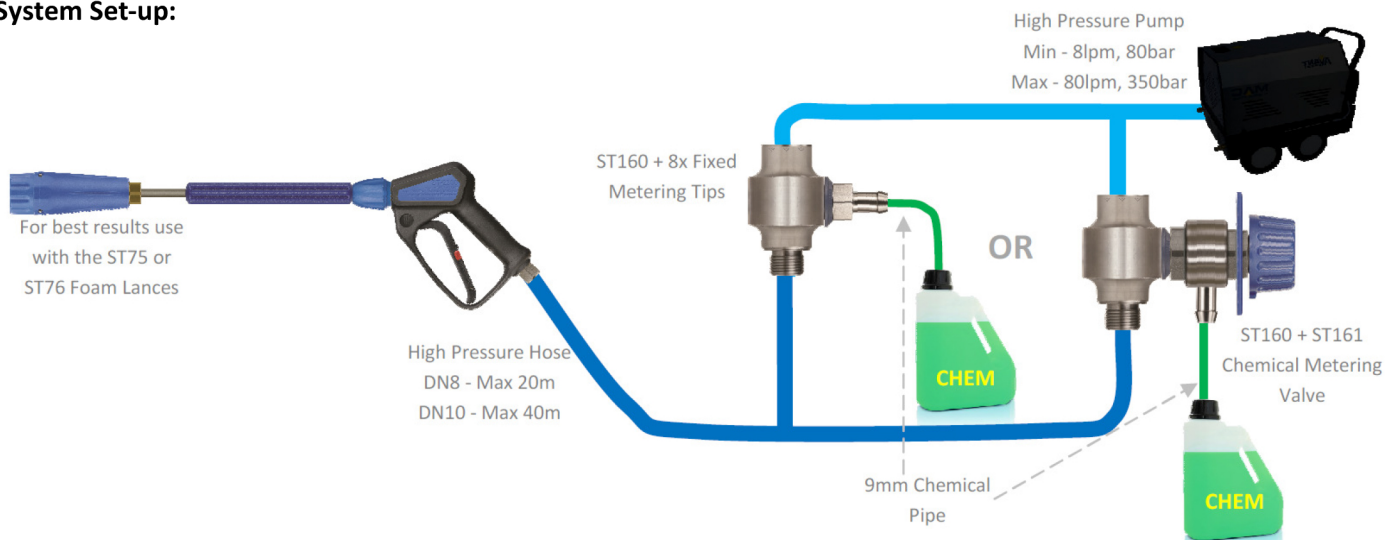

Foam Injector Set-up & Maintenance

Injector Nozzle

Use a 4mm Allen key, to screw in or out the injector nozzle. A small amount of grease on the threads will stop the nozzle becoming loose.


Counter Nozzle

Use a flat head screwdriver to screw in and out the counter nozzle. A small amount of grease on the threads will stop the nozzle becoming loose.



Check internals for chemical residue build up. Flushing with clean water after every use will help stop any check valve problems.

Metering Tips Installation & Dosing Chart

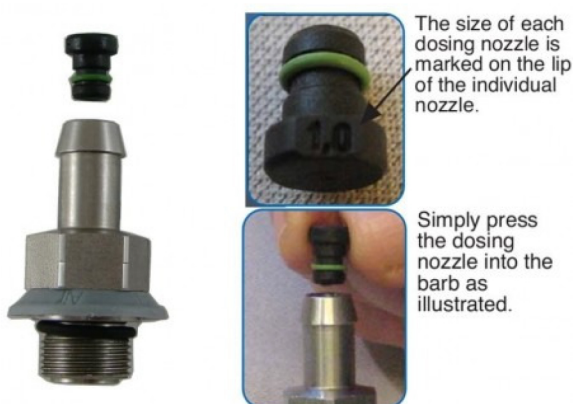

Dosing Nozzle Size	Dosing Percentage
0.5mm	0.5%
0.6mm	0.8%
0.7mm	1.0%
1.0mm	2.5%
1.1mm	3.0%
1.2mm	4.0%
1.3mm	5.0%
1.5mm	8.0%
1.7mm	10%
2.0mm	13.5%