



SCHEDA ATTREZZATURA PER MANUTENZIONE POMPE SERIE 47
MAINTENANCE TOOL CHART FOR PUMPS 47 SERIES



PARTICOLARE DA SOSTITUIRE PART TO REPLACE		ATTREZZO ESTRAZIONE REMOVING TOOL			ATTREZZO INSERIMENTO INSERTION TOOL		
CODICE PART NO.	DESCRIZIONE DESCRIPTION	CODICE PART NO.	DESCRIZIONE DESCRIPTION	UTILIZZARE CON USE WITH	CODICE PART NO.	DESCRIZIONE DESCRIPTION	UTILIZZARE CON USE WITH
90162500	OIL SEAL D. 22x32x5,5				26083500	OIL SEAL INSERTION TOOL	
90264200	PACKING D. 16x30x7/4	27179700	PACKING EXTRACTION SOCKET Ø16	USE WITH EXTRACTOR 26019400	26499300	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 26134600
90270500	PACKING D. 20x35x7,5/4,5 H.P.	26093400	PACKING EXTRACTION SOCKET Ø20	USE WITH EXTRACTOR 26019400	26014000	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 26134600
90272500	PACKING D. 22x35x7/4,5 H.P.	26093500	PACKING EXTRACTION SOCKET Ø22	USE WITH EXTRACTOR 26019400	26014000	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 26134600
90274500	PACKING D. 24x35x6/4 H.P.	26093600	PACKING EXTRACTION SOCKET Ø24	USE WITH EXTRACTOR 26019400	26014000	PACKING INSERTION GUIDE	USE WITH DRIVE STUD 26134600
90164800	OIL SEAL D. 30x55x7				26083600	OIL SEAL INSERTION TOOL	