

ST160 Foam Injector Spares



9mm Hosetail
(200163350)


Injector Nozzle

Use a 4mm Allen key, to screw in or out the injector nozzle. A small amount of grease on the threads will stop the nozzle becoming

Counter Nozzle

Use a flat head screwdriver to screw in and out the counter nozzle. A small amount of grease on the threads will stop the nozzle


Check internals for chemical residue build up. Flushing with clean water after every use will help stop any check valve problems.

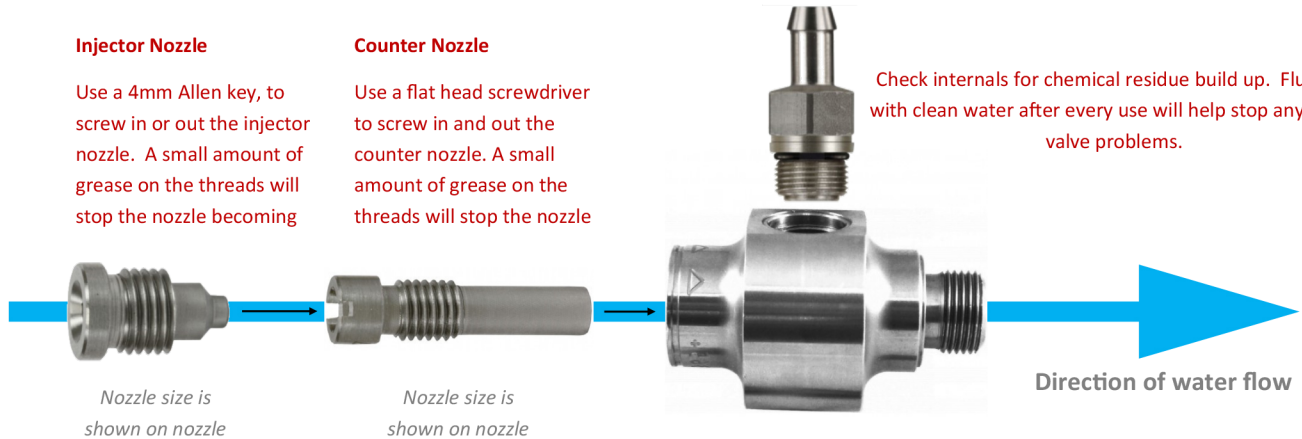

ST75 Foam Lance Spares



Injector Nozzle Ø	Injector Nozzle	Counter Nozzle Ø	Counter Nozzle
1.2	040003642	1.7	040003517
1.3	040003643		
1.4	040003644	2.0	040003521
1.5	040003645		
1.6	040003646		
1.7	040003647	2.3	040003623
1.8	040003648		
1.9	040003649		

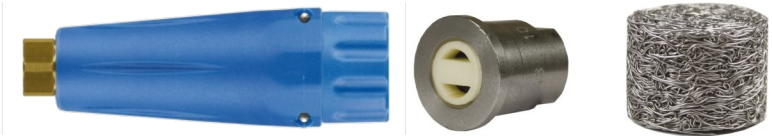

Foam Lance Nozzle Size	ST75 Part Number	ST75 Spare Nozzle	Spare Foam Gauze
05	200075576	200075405	GS25151251
05	200075576	200075405	
065	200075572	200075406	
070	200075572	200075427	
075	200075572	200075407	
10	200075573	200075410	
13	200075578	200075413	
13	200075578	200075413	